





1) Inserire la (U)SIM card nel router (utilizzare lo slot situato sul pannello posteriore)

2) Collegare le antenne rispettivamente alle prese antenna SMA presenti sul pannello posteriore (Main ed Aux)

3) Inserire l'alimentatore nella presa 220V ed il connettore nella presa sul pannello posteriore (Power) ed accendere il router dal tasto ON OFF presente sul pannello posteriore.

4)Connettersi al router da un PC tramite cavo LAN (collega re il cavo in dotazione indifferentemente su una delle 4 porte LAN disponibili)

5) Dal PC connesso al router (tramite cavo lan o wifi) aprire il browser e digitare nella barra degli indirizzi: <u>http://10.0.0.138</u> (indirizzo IP di default) and premere invio.



Comparirà una maschera con la richiesta di USER ID e password : inserite la admin / admin , poi confermare. Si aprirà il menu di configurazione del router:

Summary	Next	G [™] Settings	Wi-Fi	Advanced Settings	Diagnostics
Summary					
Hardware Versio	on:	96358G-123			
Software Version	n:	3G9WB-N10	1-S306TBP-T01_R14		
Bootloader (CFE)) Version:	1.0.37-6.8			
Wireless Driver \	Version:	3.131.35.4.0	cpe2.0		
Device Info for Ne	ext G™ net	twork			
Network:	I WIND				
Link:	Connected	đ			
Mode:	HSDPA				
Signal Strength:					
SIM Info:	SIM insert	ted			
This information r	reflects th	e current s	tatus of your conne	ction.	
LAN IP Address:	10	0.0.0.138			
WAN IP Address	: 15	51.34.144.53			
Default Gateway	/: 10).64.64.64			
Primary DNS Ser	ver: 21	12.52.97.25			
Secondary DNS S	Server: 19	93.70.152.25			
Secondary DNS S Date/Time:	Server: 19	93.70.152.25 ue May 22 04	:36:24 2012		
nel menu "N		33.70.152.25 ue May 22 04 Setting 7.2 Home	s" e fare click	< sulla voce "Sett	ings", apparirà la s
Secondary DNS S Date/Time:		Setting 7.2 Home	IS" e fare click Network Gateway Wi-Fi	< sulla voce "Sett Advanced Settings	ings", apparirà la s Diagnostics
Secondary DNS S Date/Time: nel menu "N Summary Next G TM Setting:	Next G	33.70.152.25 ue May 22 04 Setting 7.2 Home G [™] Settings	Is" e fare click Network Gateway WI-FI	< sulla voce "Sett Advanced Settings	ings", apparirà la s Diagnostics
Secondary DNS S Date/Time: nel menu "N Net G™ Setting: Profile:		33.70.152.25 ue May 22 04 Setting 7.2 Home G [™] Settings ustom APN	s" e fare click Network Gateway Wi-Fi	< sulla voce "Sett Advanced Settings	ings", apparirà la s Diagnostics
Secondary DNS S Date/Time: nel menu "N Control of the second Summary Next G TM Setting: Profile: Authentication Met	Server: 19 Tri Tri Next G Next G Next Ci s > Setup Ci thod: AI	Setting 7.2 Home G [™] Settings Istom APN JTO ▼	IS" e fare click	< sulla voce "Sett Advanced Settings	ings", apparirà la s
Secondary DNS S Date/Time: nel menu "N Commany Summary Next G TM Setting: Profile: Authentication Met APN:	Next G	Setting 7.2 Home G TM Settings ustom APN JTO ▼ ernet.wind	IS" e fare click	< sulla voce "Sett Advanced Settings	ings", apparirà la s Diagnostics



Data Compression: Off 🔻



Posizionare il cursore menu a tendina Profile su "Custom APN", "Authentication Method" su AUTO ed inserire l'APN in base alla SIM utilizzata:

(U)SIM TRE ITA: APN: tre.it

SIM Vodafone: APN: web.omnitel.it

SIM Tim: APN: ibox.tim.it

SIM WIND: APN: internet.wind

SIM POSTEMOBILE: APN: postemobile.it

Lasciare vuoti I campi User e Password e Posizionare il flag sul tipo di connessione (All Band Automatic o 3G-All, 2G-All, ecc..., in base alle esigenze) dopo click su SAVE e poi su CONNECT (il led sul pannello frontale del router "Internet diventa verde e lampeggia quandi c'è scambio di dati).

Impostazioni Wi Fi

Dal menu principale scegliere: WiFi e poi Settings:

Summary	Next G [™] Settings	Wi-Fi	Advanced Settings	Diagnostics		
Wi-Fi > Se	ttings					
This page allows you to configure your Wi-Fi settings. You can enable or disable the wireless LAN interface, hide the network from active scans, set the wireless network name (also known as SSID) and restrict the channel set based on country requirements. Click "Apply" to configure the basic wireless options.						
Enable Wi-Fi						
Ena	DIG WITT					
Ena	ble SSID Broadcast					
Ena Enables the makes the network pro- SSID:	ble SSID Broadcast wireless (Wi-Fi) network name network name private and provid ofile on their computer. BigPond6665	to be broadcast p es enhanced sec	publicly to any wireless users within urity by requiring wireless users to	wireless range of your network. Disabling the SSID broad enter the network name manually when creating a wirele		
Ena Enables the makes the network pri SSID: BSSID:	ble SSID Broadcast : wireless (Wi-Fi) network name network name private and provid ofile on their computer. BigPond6665 00:1A:2B:0C:0B:A4	to be broadcast p es enhanced sec	oublicly to any wireless users within urity by requiring wireless users to	wireless range of your network. Disabling the SSID broad enter the network name manually when creating a wirele		
Ena Enables the makes the network pr SSID: BSSID: Country:	ble WTT ble SSID Broadcast wireless (Wi-Fi) network name network name private and provid ofile on their computer. BigPond6665 00:1A:2B:0C:0B:A4 ITALY	to be broadcast p es enhanced sec	oublicly to any wireless users within urity by requiring wireless users to	wireless range of your network. Disabling the SSID broad enter the network name manually when creating a wirele		
Ena Enables the makes the network pr SSID: BSSID: Country:	ble WTT ble SSID Broadcast : wireless (Wi-Fi) network name network name private and provid ofile on their computer. BigPond6665 00:1A:2B:0C:0B:A4 ITALY	to be broadcast p es enhanced sec	bublicly to any wireless users within urity by requiring wireless users to	wireless range of your network. Disabling the SSID broad enter the network name manually when creating a wirele		
Ena Ena Enables the makes the network pr SSID: BSSID: Country: Ena	ble Wirf ble SSID Broadcast e wireless (Wi-Fi) network name network name private and provid ofile on their computer. BigPond6665 00:1A:2B:0C:0B:A4 ITALY ble Wireless Guest Network	to be broadcast p es enhanced sec	publicly to any wireless users within urity by requiring wireless users to	wireless range of your network. Disabling the SSID broad enter the network name manually when creating a wirele		

Nel campo SSID è possibile inserire il nome della rete WiFi, impostare la voce Country su ITALY e poi click su Save/Apply.

Sempre nel menu WiFi, alle voce Security, è possibile inserire una password di protezione della rete WiFi:



Telefonia - Elettronica - Telecomunicazioni via G. Oberdan, 64 – 70042 Mola di Bari (BA) - Italy Tel: 080-2145146 / Fax: 080-2142677 Email: marotecsas@gmail.com - <u>info@marotec.it</u> / Web: <u>www.marotec.it</u>

B	T.2 Home Network Gateway							
	Summary	Next G [™] Settings	Wi-Fi	Advanced Settings	Diagnostics			
	Wi-Fi > Security							
	This page allows you to configure your Wi-Fi security settings. You can sets the network authentication method, selecting data encryption, specify whether a network key is required to authenticate to this wireless network and specify the encryption strength. Click "Apply" to configure the wireless security options.							
	Select SSID:	BigPond1037	•					
	Network Authentication:	WPA2 -PSK	•					
	WPA Pre-Shared Key:	•••••	Click here to display					
	WPA Group Rekey Interval:	0						
	WPA Encryption:	TKIP 💌						
	WEP Encryption:	Disabled 💌						

Save/Apply

Scegliere dal menu a tendina OPEN e il tipo di protezione desiderata dal menu "WEP Encryption" ad esempio WPA2-PSK, digitare la password nel campo "WPA Pre Shared Key" (utilizzando la voce "Click here to display" è possibile leggere la password inserita), poi click su Save/Apply.

In alcune zone potrebbe essere necessario cambiare il canale di trasmissione per conflitti con altri trasmettitori WiFi, in questo caso da WiFi aprire il menu "Configuration" ed impostare un canale di trasmissione dal menu a tendina "Channel", confermare con "Save/Apply".

BIGPOND° 7.2 Home Network Gateway							
	Summary	Next G [™] Settings	Wi-Fi	Advanced Settings	Diagnostics		
	Wi-Fi > Configuration						
	This page allows you to configu: threshold, set the RTS threshold, Click "Apply" to configure the ac	re your Wi-Fi Configuration set the wakeup interval for dvanced wireless options.	settings. You can select a particu clients in power-save mode, set i	lar channel on which to operate the beacon interval for the acce	e, force the transmission rate to a particular speed, set the fragmentation ss point, set XPress mode and set whether short or long preambles are used.		
	AP Isolation:	Off 💌					
	Band:	2.4GHz 💌					
	Channel:	2 💌	Current	: 2			
	Auto Channel Timer(min)	0					
	54g™ Rate:	Auto 💌					
	Multicast Rate:	Auto 💌					
	Basic Rate:	Default		▼			
	Fragmentation Threshold:	2346					
	RTS Threshold:	2347					
	DTIM Interval:	1					
	Beacon Interval:	100					
	XPress™ Technology:	Disabled 💌					
	54g™ Mode:	54g Auto	•				
	54g™ Protection:	Auto 💌					
	Preamble Type:	long 💌					
	Transmit Power:	100% 💌					
				Save/Apply			



Telefonia - Elettronica - Telecomunicazioni via G. Oberdan, 64 – 70042 Mola di Bari (BA) - Italy Tel: 080-2145146 / Fax: 080-2142677 Email: marotecsas@gmail.com - <u>info@marotec.it</u> / Web: <u>www.marotec.it</u>

E' consigliabile al termine delle impostazioni effettuare un reboot del router dal menu diagnostic "Reboot System".

Per altre configurazioni ed impostazioni avanzate, fare riferimento al manuale completo in lingua inglese.