
# **Product Description**



HUAWEI E5770s-320 Mobile WiFi V200R001

Issue 02

**Date** 2015-05-18

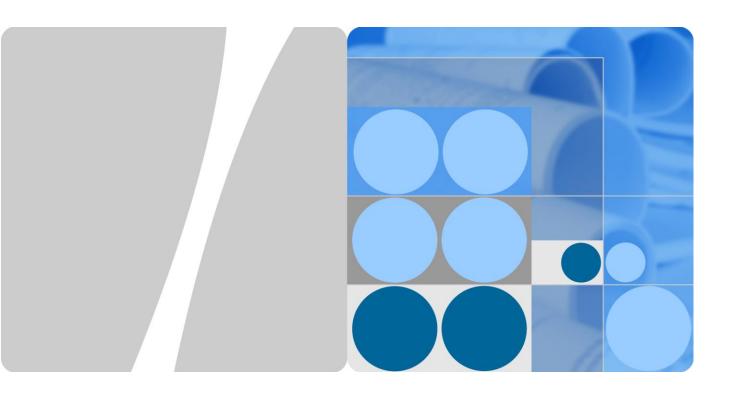



Huawei Technologies Co., Ltd. provides customers with comprehensive technical support and service. Please feel free to contact our local office or company headquarters.

#### Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base

Bantian, Longgang Shenzhen 518129

People's Republic of China

Website: http://consumer.huawei.com/en/

#### Copyright © Huawei Technologies Co., Ltd. 2015. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

#### **Trademarks and Permissions**



HUAWEI and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

#### **Notice**

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.



# **About This Document**

## **Summary**

This document provides information about the major functions, supported services and system architecture.

The following table lists the contents of this document.

Chapter	Details
1 Overview	The supported network modes, basic services and functions, and the appearance of the product.
2 Features	The supported features and technical specifications of the product.
3 Services and Applications	The services and applications of the product.
4 System Architecture	The architecture of the product.
5 Packing List	The items contained in the package of the product.



# **History**

Issue	Details	Date
01	First release.	2015-01-07
02	<ul> <li>Modify the Weight.</li> <li>Modify the "Charging Sling" to Standard.</li> <li>Modify the description of "Supplying power to devices".</li> </ul>	2015-05-18



# **Contents**

1 Overview	6
1.1 Brief Introduction	6
1.2 Optional Features	7
2 Features	8
2.1 Main Features	8
2.2 Technical Specifications	9
2.2.1 Hardware	9
2.2.2 Software	11
3 Services and Applications	13
3.1 Data Service	13
3.1.1 Accessing the Internet Using an LTE, 3G or 2G Network	13
3.1.2 Accessing the Internet Using Ethernet	15
3.1.3 LTE/3G/Wi-Fi Auto Offload	16
3.2 SMS	16
3.3 Sharing Storage	17
3.4 Supplying power to devices	17
4 System Architecture	18
4.1 System Architecture	18
4.2 Functional Modules	19
5 Packing Liet	20



# 1 Overview

#### 1.1 Brief Introduction

HUAWEI E5770s-320 Mobile WiFi (hereinafter referred to as the E5770s-320) is a high-speed packet access mobile hotspot. It is a multi-mode wireless terminal for SOHO (Small Office and Home Office) and business professionals. The E5770s-320 can access the Internet through a LTE/3G/2G network, or using its Ethernet port.

The E5770s-320 supports the following standards:

- Long Term Evolution (LTE)
- Dual Carrier High Speed Packet Access Plus (DC-HSPA+)
- High Speed Packet Access Plus (HSPA+)
- High Speed Uplink Packet Access (HSUPA)
- High Speed Downlink Packet Access (HSDPA)
- Universal Mobile Telecommunications System (UMTS)
- Enhanced Data rates for Global Evolution (EDGE)
- General Packet Radio Service (GPRS)
- Global System for Mobile communications (GSM)
- Ethernet

The E5770s-320 provides the following services:

- LTE packet data service
- DC-HSPA+ packet data service
- HSPA+ packet data service
- HSPA/UMTS packet data service
- EDGE/GPRS packet data service
- Short Message Service (SMS)

You can connect the E5770s-320 with the USB interface or the Ethernet port of a computer, or connect the E5770s-320 with the Wi-Fi. In the service area of the LTE/DC-HSPA+/HSPA+/HSPA/UMTS or EDGE/GPRS/GSM/Ethernet network, you can surf the Internet and send/receive messages/emails cordlessly. The E5770s-320 is fast, reliable, and easy to operate. Thus, mobile users can experience many new features and services with the E5770s-320. These features and services will enable a large



number of users to use the E5770s-320 and the average revenue per user (ARPU) of operators will increase substantially.

Figure 1-1 shows the profile of the E5770s-320.

Figure 1-1 E5770s-320 profile



## 1.2 Optional Features

Optional features refer to features that are not supported by the standard version or are disabled by default. These features can be customized according to operator or customer requirements. The E5770s-320's optional feature is:IPv6/IPv4 dual stack (optional).



# **2** Features

#### 2.1 Main Features

The E5770s-320 mainly supports the following features:

- LTE FDD (DL) data service of up to 150 Mbit/s
- LTE FDD (UL) data service of up to 50 Mbit/s
- LTE TDD (DL) data service of up to 112 Mbit/s (Configuration 2)
- LTE TDD (UL) data service of up to 20 Mbit/s (Configuration 1)
- DC-HSPA+ (DL) data service of up to 43.2 Mbit/s
- HSPA+ (DL) data service of up to 21.6 Mbit/s
- HSDPA (DL) data service of up to 14.4 Mbit/s
- HSUPA (UL) data service of up to 5.76 Mbit/s
- UMTS data service of up to 384 kbit/s
- EDGE data service of up to 236.8 kbit/s
- GPRS data service of up to 85.6 kbit/s
- Ethernet data service of up to 100 Mbit/s
- PS domain data service based on LTE/UMTS/GSM
- SMS based on UMTS and GSM
- Built-in LTE/UMTS/GSM and WLAN high gain antenna
- Micro Secure Digital Memory (microSD) Card
- SIM lock
- Wi-Fi and WPS
- LTE/3G/Wi-Fi auto offload
- Supply power to devices (working as a power bank)
- Support for HUAWEI HiLink APP
- Press and Play
- IPv6/IPv4 dual stack (optional)
- Display current SSID and Wi-Fi key on the screen
- Built-in DHCP Server, DNS RELAY and NAT
- Online software upgrade
- Traffic statistic



- Ethernet port
- PPPoE dial up
- Standard Micro USB interface
- USB interface
- OLED screen
- Windows Vista SP1/SP2, Windows 7, Windows 8, Windows 8.1 (does not support Windows RT), MAC OS X 10.7, 10.8 and 10.9 with latest upgrades

## 2.2 Technical Specifications

#### 2.2.1 Hardware

Table 2-1 lists the hardware specifications.

**Table 2-1** Hardware specifications

Item	Specifications		
Technical	WAN: LTE/DC-HSPA+/HSPA+/HSPA/UMTS/EDGE/GPRS/GSM		
standard	WLAN: IEEE 802.11b/g/n		
Operating frequency	LTE:  • FDD B1(2100 MHz)/B3(1800 MHz)/B5(850 MHz)/B7(2600 MHz)/B8(900 MHz)/B20(800 MHz)  • TDD B38(2600 MHz)		
	DC-HSPA+/HSPA+/HSPA/UMTS: B1(2100 MHz)/B2(1900 MHz)/B5(850 MHz)/B8(900 MHz)		
	EDGE/GPRS/GSM: 1900/1800/900/850 MHz		
	WLAN: 2.4 GHz		
Internal memory	128 MB NAND flash and 128 MB DDR SDRAM		
Maximum transmitter power	LTE: Conform to Power Class 3 Definition		
	UMTS: Conform to Power Class 3 Definition		
	WLAN	802.11b: 15 dBm	
		802.11g: 12 dBm	
		802.11n: 11 dBm	
Receiver sensitivity	LTE: Confirm to 3GPP Requirements		
	UMTS: Confirm to 3GPP Requirements		
	WLAN	802.11b: -76 dBm@11 Mbit/s	
		802.11g: -65 dBm@54 Mbit/s	



Item	Specifications		
		802.11n: -64 dBm@65 Mbit/s	
WLAN speed	802.11b: Up to 11 Mbit/s		
	802.11g: Up to 54 Mbit/s		
	802.11n	HT20: Support MCS0–MCS7; Up to 72.2 Mbit/s. Support MCS8–MCS15; Up to 144.4 Mbit/s. HT40: Support MCS0–MCS7; Up to 150 Mbit/s. Support MCS8–MCS15; Up to 300 Mbit/s.	
Maximum power consumption	3.5 W		
Charger	AC: 100–24	0 V (Input)	
	DC: 5 V, 2 A (Output)		
Supplying Power to Devices	rated output: 5 V, 2 A		
Battery	Type: Li (rechargeable and irremovable)		
	Capacity: 3.7 V, 5200 mAh		
	Maximum working time: 20 hours (depending on the network)		
	Maximum standby time: 500 hours (depending on the network)		
External interfaces	Micro USB interface		
Interidoco	USB interface (supplying power to other devices)		
	Standard microSD card interface		
	Standard 6-pin SIM card interface		
	Ethernet port: RJ45		
Screen	OLED		
key-press	Power switch, WPS switch, Reset switch		
Antenna	Built-in LTE/UMTS/GSM main antenna		
	Built-in LTE/UMTS diversity antenna		
	Built-in WLAN antenna		
Dimensions (W × D × H)	106.0 mm × 68.4 mm × 22.5 mm		
Weight	about 185 g (including the battery)		



Item	Specifications
Temperature	Operating: 0°C to +35°C
	Storage: -20°C to +60°C
Humidity	5% to 95% (non-condensing)

#### 2.2.2 Software

Table 2-2 lists the software specifications.

Table 2-2 software specifications

Item	Description	
SMS	<ul> <li>Writing/Sending/Receiving</li> <li>Sending/Receiving extra-long messages</li> <li>Storage: Up to 500 messages can be saved in the internal memory of the E5770s-320.</li> <li>New message prompt</li> </ul>	
Network connection setup	<ul><li>APN management: create, delete and edit</li><li>Set up network connection</li></ul>	
WLAN setup	<ul> <li>SSID broadcasting and hiding</li> <li>Open system and shared key authentication</li> <li>ASCII and HEX keys</li> <li>64/128-bit WEP encryption</li> <li>256-bit WPA2-PSK encryption</li> <li>WPA2-PSK integrated encryption</li> <li>AES encryption algorithm</li> <li>TKIP and AES integrated encryption algorithm</li> <li>Automatic adjustment of ratios</li> <li>Display STA status</li> <li>Turn off Wi-Fi automatically</li> <li>WLAN MAC filter</li> </ul>	
Firewall setup	<ul> <li>Firewall Switch</li> <li>LAN IP Filter</li> <li>Virtual Server</li> <li>ACL Service</li> <li>DMZ Service</li> <li>UPnP Service</li> </ul>	



Item	Description	
NAT setup	<ul><li>CONE NAT</li><li>Symmetric NAT</li><li>ALG</li><li>VPN passthrough</li></ul>	
DHCP setup	<ul> <li>DHCP server enabling and disabling</li> <li>Address pool of the DHCP server setup</li> <li>DHCP lease time setup</li> </ul>	
Software installation	Automatic installation (Plug and Play)	
LTE/3G/Wi-Fi auto offload	<ul> <li>Accessing to WAN via LTE/3G or Wi-Fi</li> <li>Automatic offload between LTE/3G and Wi-Fi</li> </ul>	
IPv6/IPv4 dual stack (optional)	<ul> <li>DHCPv6/v4 server and client</li> <li>DNSv6/v4 server and client</li> <li>Display IPv6/v4 WAN address</li> </ul>	
Other	Network connection settings:  • Automatic network selection and registration  • Manual network selection and registration	
	Network status display: signal, operator name, system mode, and so on.	
	Selection of network connection types, for example:  • LTE Only  • 3G Only  • Auto	
	PIN management: activate/deactivate PIN, PIN lock, changing PIN, unblocking by using the PUK.	
System requirement	<ul> <li>Windows Vista SP1/SP2, Windows 7, Windows 8, Windows 8.1 (does not support Windows RT)</li> <li>Mac OS X 10.7, 10.8 and 10.9 with latest upgrades</li> <li>Your computer's hardware system should meet or exceed the recommended system requirements for the installed version of OS</li> </ul>	



# 3 Services and Applications

#### 3.1 Data Service


#### 3.1.1 Accessing the Internet Using an LTE, 3G or 2G Network

#### **Functioning as a Wireless Modem**

The E5770s-320 can be used as a wireless modem when the Wi-Fi is enabled. You can access the Internet service through setting up the wireless network connection with the E5770s-320.

A maximum of ten wireless users can access the E5770s-320 at the same time. You can set up the WLAN with the access point (AP) function.

Figure 3-1 Connecting multiple devices through Wi-Fi

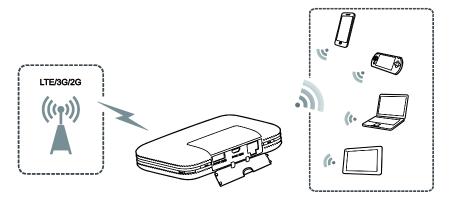




#### **Functioning as a USB Modem**

After you connect the E5770s-320 and PC with a USB data cable, the Web page is displayed on the PC desktops automatically. You can directly use the default settings (or configure APN on the E5770s-320 Web page) and set up a network connection. Then you can send or receive E-mail, access the network through wireless connection, and download files through wireless data channels.


Figure 3-2 Connecting a single device through USB

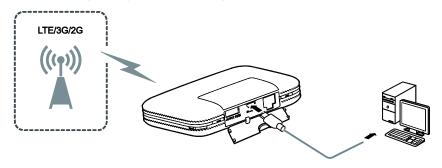

#### **Providing Network Connection Using the Ethernet Port**

After you connect the E5770s-320 to a PC using a network cable to support automatic identification of the WAN/LAN port in access mode, you can configure the APN on the E5770s-320's Web page or use the default APN settings, and set up a network connection. You can then send or receive emails, browse Web pages, and download files from the PC using the E5770s-320's data connection.

Figure 3-3 Connecting a single device through Ethernet port

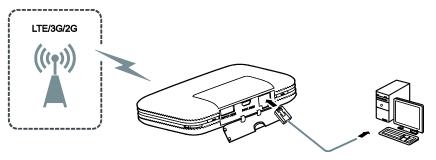




# Setting Up Connections Using Wi-Fi, USB, and the Ethernet Port Simultaneously

Multiple devices can connect to the E5770s-320 simultaneously using Wi-Fi, USB, and the Ethernet port.


**Figure 3-4** Connecting multiple devices through Wi-Fi, USB, and Ethernet port simultaneously

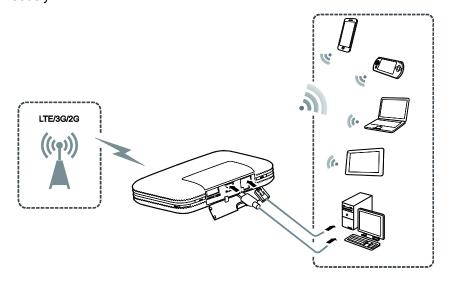

#### 3.1.2 Accessing the Internet Using Ethernet

A network cable is connected with the Ethernet port of the E5770s-320, to support automatic identification of the WAN/LAN port in access mode, and automatic selection of accessing manners of ADSL domestic wideband, DHCP hotel wideband or static IP wideband. It is unnecessary to select the accessing manners after entering into the Web page manually. You can easily access the Internet using the Ethernet to save your LTE/3G/2G network flow and fee.

Figure 3-5 Accessing the Internet using Ethernet

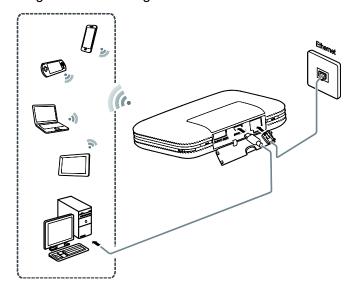




#### 3.1.3 LTE/3G/Wi-Fi Auto Offload

The E5770s-320 allows you to access the Internet via LTE/3G or Wi-Fi. When you are using the E5770s-320 in areas with a Wi-Fi hotspot, for example, an airport, a cafe, a hotel, or your home, the E5770s-320 switches to Wi-Fi connection automatically, saving your LTE/3G network traffic fees.

After the function is enabled, a maximum of nine wireless users can access the E5770s-320 at the same time.

Figure 3-6 LTE/3G/Wi-Fi auto offload

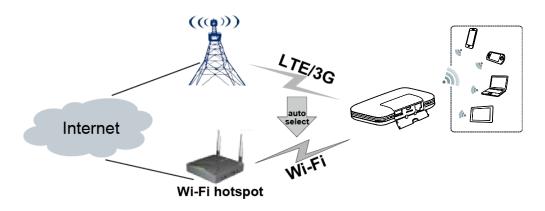


#### **3.2 SMS**

The E5770s-320 supports message writing/sending/receiving. You can manage messages through the Web page, such as an inbox, an outbox and a draft.



### 3.3 Sharing Storage

When the Mobile WiFi is connected to a storage device, such as a USB flash drive or portable hard disk, you can share the device's data using the HUAWEI HiLink APP or the Mobile WiFi web management page.

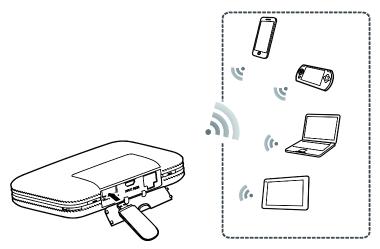

#### Note:

If you're using storage sharing, you won't be able to connect to the Internet using a data cable and computer.


## 3.4 Supplying power to devices

The E5770s-320 can work as a portable power supply (rated output: 5V, 2A) for other devices, such as phones, tablets, music players, and Bluetooth headsets. You can charge those devices by simply connecting them to the E5770s-320 using a USB cable. The E5770s-320 supports plug and charge whether it is on or off.

Some devices can be charged only when the Mobile WiFi is on.

#### Note:

- Do not connect both connectors of a data cable to the E5770s-320.
- If the E5770s-320 is overheating or its battery level is low, it will stop charging other devices to ensure its performance.
- Do not fling the charging sling to avoid injuring others or the device itself.

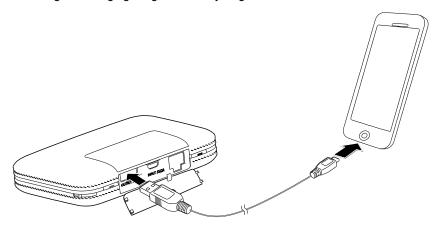




# 4 System Architecture

## 4.1 System Architecture

Figure 4-1 shows the system architecture.

Figure 4-1 System architecture

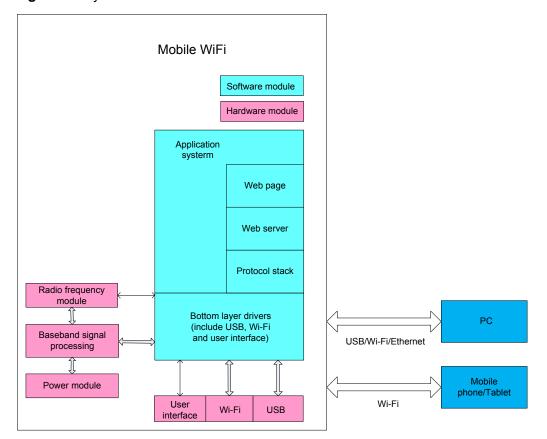



#### 4.2 Functional Modules

- Radio frequency module: It sends/receives radio signals and modulates/demodulates the radio frequency (RF) signals and baseband signals
- Baseband signal processing: It processes
   LTE/DC-HSPA+/HSPA+/UMTS/EDGE/GPRS/GSMbaseband digital signals, including:
  - Modulating/Demodulating LTE/DC-HSPA+/HSPA+/UMTS/EDGE/GPRS/GSM baseband signals
  - Encoding/Decoding LTE/DC-HSPA+/HSPA+/UMTS/EDGE/GPRS/GSM channel
- 3. **Bottom layer driver**: It drives peripherals, including a USB device, Wi-Fi devices, a screen, buttons, a SIM card and a microSD card.
- 4. **Protocol stack system**: It processes protocols of LTE/DC-HSPA+/HSPA+/UMTS/EDGE/GPRS/GSM and TCP/IP.
- 5. **Application system:** It provides management system, including SMS, PS domain service, Wi-Fi configuration, network service, Web service and Web page. The user can set management parameters by Web page.
- 6. **User interface:** It provides human-computer interaction, including a screen and buttons.



# 5 Packing List

This chapter describes the items contained in the package of the E5770s-320.

Table 5-1 lists the items contained in the package of the E5770s-320.

Table 5-1 Packing list of the E5770s-320

Item	Quantity	Remarks
Mobile WiFi	1	Standard
Rechargeable Battery (irremovable, 5200 mAh)	1	Standard
USB Cable	1	Standard
Charging Sling	1	Standard
Charger	1	Standard
Quick Start	1	Standard
Safety Information	1	Standard
Warranty Card	1	Optional



# A

# **Acronyms and Abbreviations**

**3G** The Third Generation

ACL access control list

**AES** Advanced Encryption Standard

**ALG** application level gateway

**APN** access point name

**ARPU** average revenue per user

**ASCII** American Standard Code for Information Interchange

**CA** carrier aggregation

**DC-HSPA+** Dual Carrier High Speed Packet Access Plus

**DHCP** Dynamic Host Configuration Protocol

**DMZ** demilitarized zone

**DNS** Domain Name Server

**EDGE** Enhanced Data Rates for GSM Evolution

**FDD** frequency division duplex

**GPRS** General Packet Radio Service

**GSM** Global System for Mobile Communications

**HSPA+** High Speed Packet Access Plus

**HSUPA** High Speed Uplink Packet Access

**HSDPA** High Speed Downlink Packet Access

IEEE Institute of Electrical and Electronics Engineers

IP Internet Protocol

LTE Liquid Crystal Display

LTE Long Term Evolution



MAC Medium Access Control

**Modem** Modulator Demodulator

NAT Network Address Translation

**OS** Operating System

**PC** personal computer

PIN personal identification number

**PnP** Plug and Play

**PS** packet switched

PUK PIN unblocking key

**SIM** subscriber identity module

**SMS** short messaging service

**SOHO** small office home office

SSID Service Set Identifier

**TDD** Time Division Duplex

**TFT** Thin Film Transistor

**TKIP** Temporal Key Integrity Protocol

**UMTS** Universal Mobile Telecommunications System

**UPnP** Universal Plug and Play

**USB** Universal Serial Bus

**VPN** Virtual Private Network

**WAN** wireless area network

**WEP** wired equivalent privacy

Wi-Fi Wireless Fidelity

**WLAN** wireless local area network

WPA Wi-Fi Protected Access